

Converts JVS units from on/off firing rate to 2 stage firing rate

**FOR YOUR SAFETY:** This procedure must be performed by a professional service technician, qualified in hot water boiler and heater installation and maintenance. Improper maintenance and/or operation could create carbon monoxide gas in flue gases, which could cause serious injury, property damage, or death. Improper installation and/or operation will void the warranty.

**Shut unit off, disconnect power, and shut off gas before performing conversion**

**THIS KIT CONTAINS:**

- 4263 Conversion instructions H2366300-
- or 4263-10 Generic Conversion Instructions H2366310-

**INSTALLATION INSTRUCTIONS FOR ALL UNITS:**


1. Change DIP switch settings on aquastat on channel 1

*DIP Switches located on top left corner of temperature control*




H2366300-

DIP Switch factory settings  
Channel 1 set to "ON"

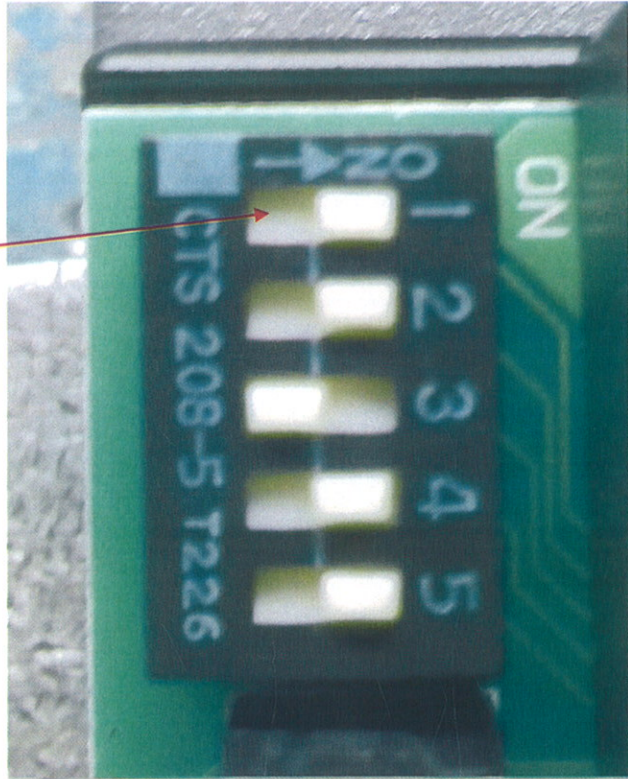

Move Switch Channel 1 to "OFF"

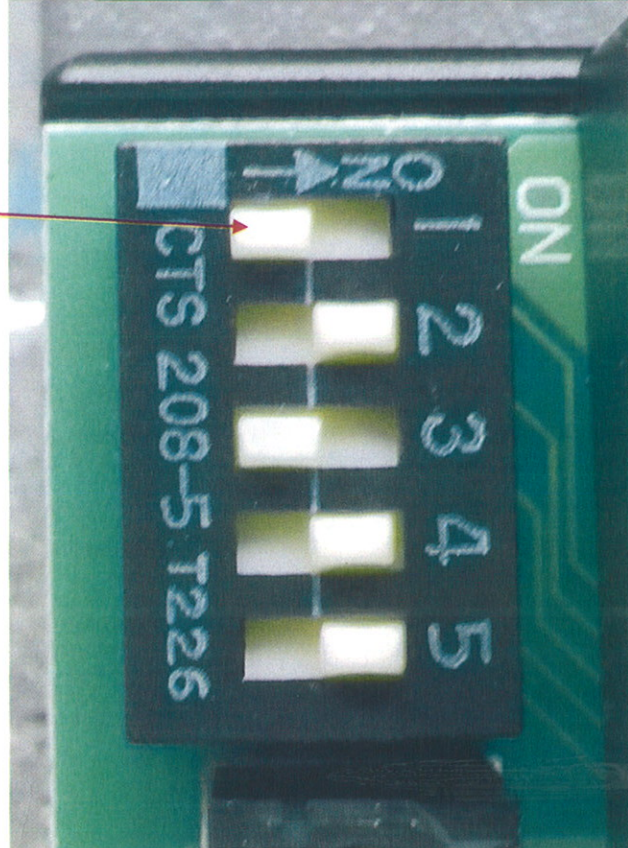


H2366300-




2. Modify wiring at gas valve:

*Factory wiring shown with brown jumper placed on valve terminal  
Note black wire not connected*

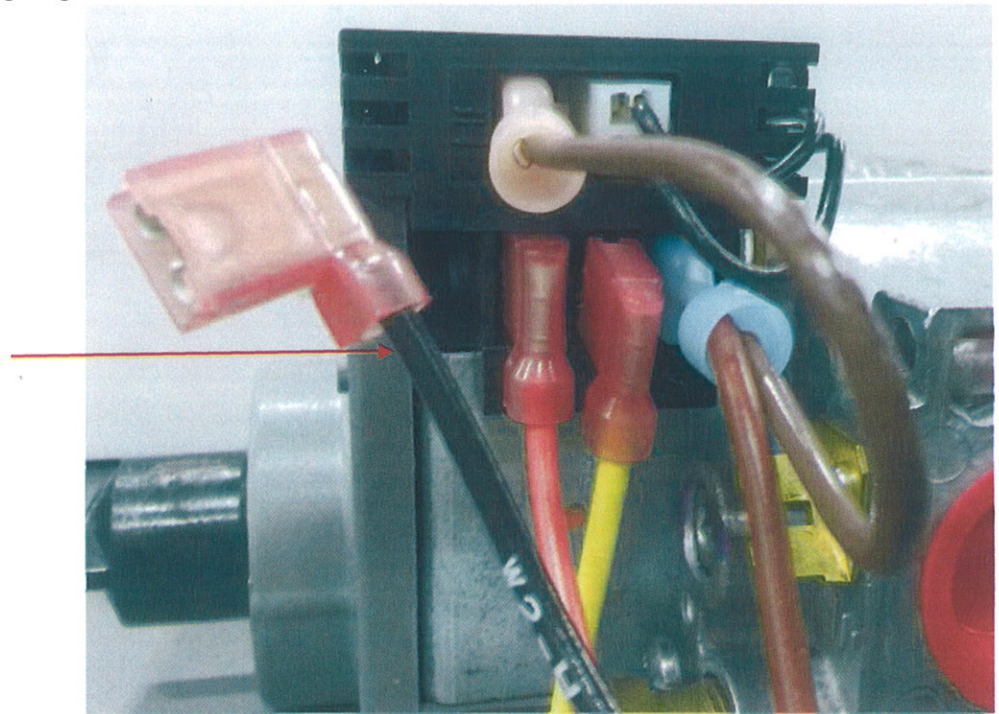

*Replace brown wire with black wire on this terminal.  
Leave brown jumper wire loose.*

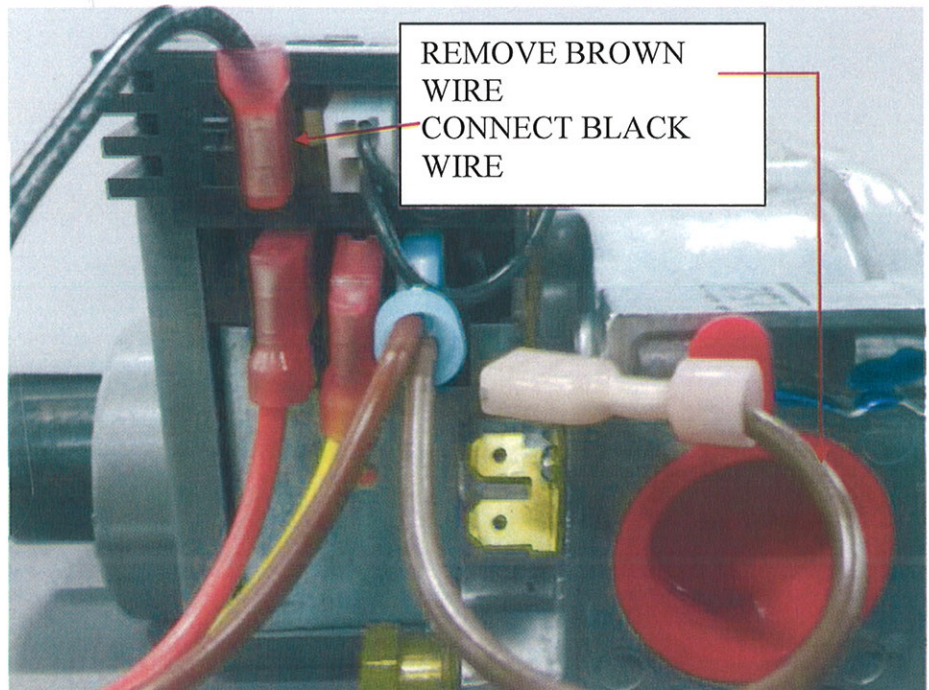

3. Unit is ready to run. Follow directions for powering down in reverse and start up.

H2366300-