

HE18FA2 HE18FM2



CLEAN COMFORT®
INDOOR AIR ESSENTIALS

Description

Evaporative Humidifiers use the principle that vapor (evaporated water) is created when warm air blows over a water-soaked area. As the vapor circulates, the relative humidity rises.

The humidity control monitors the relative humidity and activates the humidifier accordingly. The humidifier has a water supply that dispenses water evenly over a humidifier pad. The warm, dry air from the furnace with fan assist to evaporate water that is trickled over an internal humidifier pad.

Features and Benefits

- Increases the relative humidity in your home, allowing you to lower your thermostat setting and still have the same comfort level.
- Filter access is easy, allowing maintenance and upkeep easier.
- Only runs water and air through the system when humidity is needed.
- Easy-to-use humidity control included.
- Moisture control helps protect wood floors and furnishings.
- 5-Year Parts Limited Warranty. Complete warranty details available from your local dealer or at www.cleancomfort.com.

Evaporative Humidifier

**Models: HE18FA2
HE18FM2**



Specifications

	HE18FM2	HE18FA2
Humidity Control	Manual Stat	Automatic Stat
Humidifying Capacity	18 Gallons Per Day	
Humidified Area	Up to 24,000 cubic feet	
Duct Opening: width x height	13-1/2 in. x 14-1/16 in. (343 x 357 mm)	
Bypass Duct Opening	6 in. (152 mm)	
Electrical Ratings and Tolerance	120VAC, 60 HZ, 1 A Max	
Replacement Pad with Agion Coating	HE26E1004	
Replacement Pad without Agion Coating	CCF-A35	
Pad Size: width x height x depth	10 in. x 13 in. x 1-1/2 in. (254 x 330 x 38 mm)	
Drain Fitting	1/2 in. (13 mm)	
Flow Rate at Nozzle	4.7 GPH (18 L/hr.) under 120 psi	
Operating Ambient Temperature	34 to 90 °F, 1.1 to 32 °C	



WARNING

Only personnel that have been trained to install, adjust, service or repair (hereinafter, "service") the equipment specified in this manual should service the equipment. The manufacturer and seller will not be responsible for any injury or property damage arising from improper service or service procedures. If you service this unit, you assume responsibility for any injury or property damage which may result. In addition, in jurisdictions that require one or more licenses to service the equipment specified in this manual, only licensed personnel should service the equipment. Improper installation, adjustment, servicing or repair of the equipment specified in this manual, or attempting to install, adjust, service or repair the equipment specified in this manual without proper training may result in product damage, property damage, personal injury or death.

Goodman Manufacturing Company, L.P., reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations. ©2020 Goodman Manufacturing Company, L.P. • Houston, Texas • Printed in the USA.