

# WORX®

 
 


 
<b>18V Blower/Sweeper</b>	<b>EN</b>	<b>P06</b>
<b>Souffleuse/Balayeuse de 18V</b>	<b>F</b>	<b>P12</b>
<b>Sopladora/Barredora de 18V</b>	<b>ES</b>	<b>P19</b>




**HELPLINE NUMBER**  
1-866-354-WORX (9679)

**WG541 WG541.9**

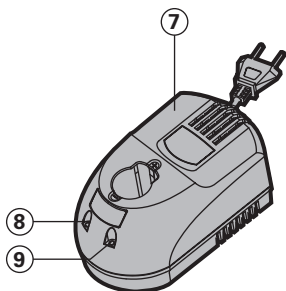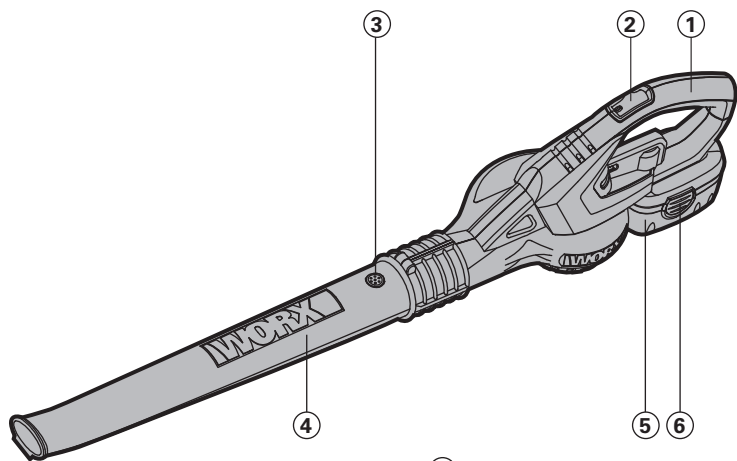


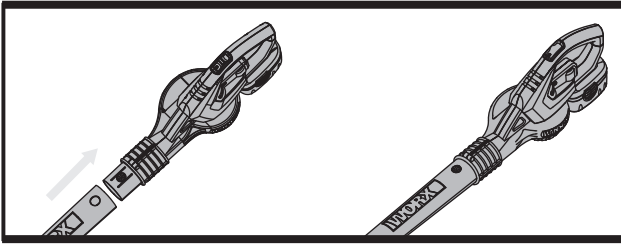


**A.1**

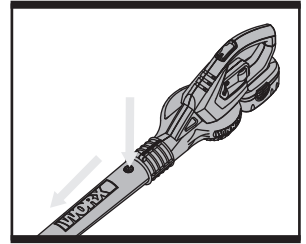 


**A.2**

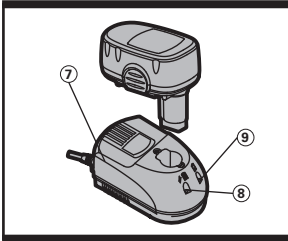 


**B**

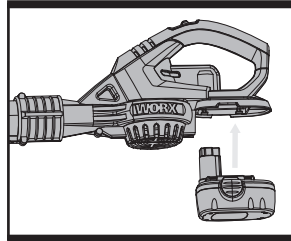 


**C.1**

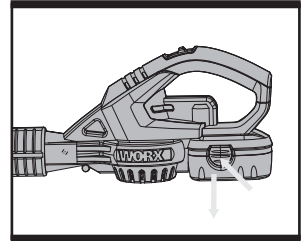 


**C.2**

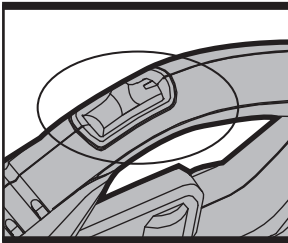 


**D**

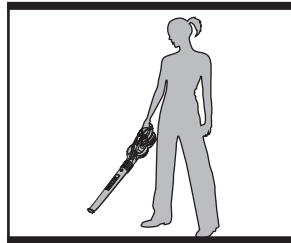 

**E**

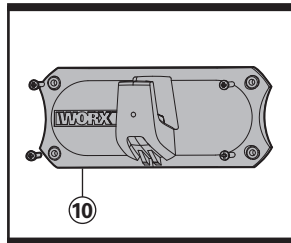 

**F.1**

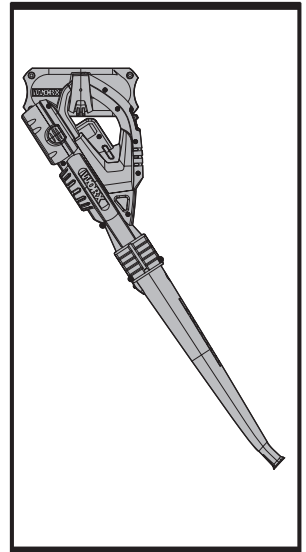 

**F.2**

- 1. HANDLE**
- 2. ON/OFF SWITCH**
- 3. TUBE RELEASE BUTTON**
- 4. BLOWER TUBE**
- 5. BATTERY PACK (ONLY WG541)**
- 6. BATTERY PACK RELEASE BUTTONS (ONLY WG541)**
- 7. BATTERY CHARGER (ONLY WG541)**
- 8. CHARGED INDICATOR LIGHT (GREEN) (ONLY WG541)**
- 9. CHARGING INDICATOR LIGHT (RED) (ONLY WG541)**
- 10. WALL MOUNT BRACKET(SEE FIG F1)**

## TECHNICAL SPECIFICATIONS

Model No.	WG541	WG541.9
Rated voltage:	18 V	
No load speed:	12500 /min	
Blow speed:	120mph	
Weight:	4.8 lbs	2.9lbs

6


## ACCESSORIES

Model No.	WG541	WG541.9
Battery pack	1	/
Charger	1	/
Wall mount bracket	1	1

We recommend that you purchase your accessories from the same store that sold you the tool. Use good quality accessories marked with a well-known brand name. Choose the type according to the work you intend to undertake. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USE

 **WARNING!** When using battery gardening appliances, basic safety precautions must always be followed to reduce the risk of fire, electric shock, and serious injury, including the following:

### 1. FOR ALL APPLIANCES

- a) Avoid dangerous environment. Don't use appliances in damp or wet locations.
- b) Don't use in rain.
- c) Keep children away. All visitors should be kept at a distance from work area.
- d) **Dress properly. Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of protective gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.**
- e) Use safety glasses. Always use face or dust mask if operation is dusty.
- f) Use right appliance. Do not use appliance for any job except that for which it is intended.
- g) Avoid unintentional starting. Don't carry plugged-in appliance with finger on switch. Be sure switch is off when plugging in.
- h) Don't force appliance. It will do the job better and with less risk of injury at the rate for which it was designed.
- i) Don't overreach. Keep proper footing and balance at all times.
- j) Stay alert. Watch what you are doing. Use common sense. Do not operate appliance when you are tired.
- k) Store idle appliances indoors. When not in use, appliances should be stored indoors in a dry, and high or locked-up place, out of reach of children.
- l) Check damaged parts. Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of

moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this manual.

### 2. WARNING - To reduce the risk of fire, electric shock, or injury:

- a) To reduce the risk of electric shock, do not expose to rain. Store indoors. Do not use on wet surfaces.
- b) Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- c) Use only as described in the manual. Use only manufacturer's recommended attachments.
- d) If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- e) Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- f) Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- g) Use extra care when cleaning on stairs.
- h) Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

### 3. SAVE THESE INSTRUCTIONS

- a) Refer to them frequently and use them to instruct others who may use this tool. If someone borrows this tool, make sure they have these instructions.
- b) Use only identical replacement parts.

## ADDITIONAL SAFETY INSTRUCTIONS FOR YOUR TOOL

- a) Don't charge appliances in damp or wet locations.
- b) Don't use battery-operated appliance in rain.

- c) Remove or disconnect battery before servicing, cleaning or removing material from the gardening appliance.
- d) Do not dispose of the battery in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
- e) Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- f) Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
- g) Charge only using the charger provided with the tool.
- h) Do not place outlet tubes near eyes or ears when operating.
- i) Do not cross gravel paths or place the tool on gravel while the tool is switched on.
- j) Do not place any objects into the openings and moving parts.
- k) Before removing the blow tube, always switch off the tool, remove the battery and allow the tool to stop running.

areas where there is health endangering debris or as a wet suction device.

- The device is designed for use by adults. Young people over 16 years may use the device under supervision only.
- The use of the device in the rain or in a humid environment is forbidden.
- The manufacturer is not liable for damage which is caused through inappropriate use or incorrect operation.

**NOTE:** Do not employ any low power machines for heavy work. Do not use your device for purposes for which it has not been designed.



**WARNING!** To reduce the risk of injury, user must read and understand instruction manual.

Risk of eye injury. Use safety goggles or similar eye protection.

To reduce the risk of injury to persons, do not operate without guards in place.

Double insulation-When servicing, use only identical replacement parts.

Keep a safety distance of at least 16ft (5m) from bystanders.

8

## CHARGERS

- a) Use your charger only to charge the battery in the tool with which it was supplied. Other batteries could burst, causing personal injury and damage.
- b) Never attempt to charge non-rechargeable batteries.
- c) Do not expose the charger to water.
- d) Do not open the charger.
- e) Do not probe the charger.

## INTENDED PURPOSE



**WARNING!** A garden blower is not a wet suction device!

- The device is designed only for blowing of dry leaves or debris in private households and as a hobby device in the garden. Any other utilization, which is not explicitly approved in these directions, can lead to damage to the device and represents a serious danger to the user.
- The device **must not** be employed in

## SYMBOLS



Warning

Read the manual



Do not dispose of batteries.  
Return exhausted pack batteries  
to your local collection or  
recycling point



Contains Ni-Cd battery. Battery  
must be recycled or disposed of  
properly



1 hour charging time



Do not expose to rain or water



Always charge the battery  
between temperatures 32°F-  
86°F(0°C-30°C).



Do not burn



Wear eye protection



Wear ear protection

## ASSEMBLY

### ASSEMBLING THE BLOWER TUBE (Fig A.1 & Fig A.2)

Before assembling the Blower Tube, be sure the on/off switch (2) is in "O" Off position.

Fit the Blower Tube to the motor housing as shown in Fig A.1. Check the Blower Tube is firmly secured.

**WARNING!** Do not attempt to operate or disable the On/Off Switch by any means other than the normal assembly or removal of the tube.

**NOTE:** Before disassembling the Blower Tube, be sure the on/off switch (2) is in "O" Off position. Press the Release Button, so that you can separate the tube.(Fig A.2)Do not try to separate the tubes by force or by using tools.

## OPERATION

### 1. CHARGING YOUR BATTERY PACK

**WARNING!** The charger and battery pack are specifically designed to work together so do not attempt to use any other devices. Never insert or allow metallic objects into your charger or battery pack connections because an electrical failure and hazard will occur.

### 2. BEFORE USING YOUR CORDLESS BLOWER



**Your battery pack is UNCHARGED and you must charge once before use.**

When you charge the new battery or one which has not been used for long periods of time, it may not reach full charge until after you have discharged it fully in use and recharge it several times.

**NOTE:** If the tool will not be used for long periods of time, charge the battery fully before storage.

### 3. HOW TO CHARGE YOUR BATTERY PACK (Fig B)

Connect the battery charger to the power supply and the green light (8) will illuminate. Then, fully insert the battery pack into the charger to make the connections and the red light (9) will illuminate to show charging has started

 A discharged battery at normal ambient temperature will take approximately 1 hours to reach full charge. When charging is completed the green light (8) will illuminate to indicate end of charge. 


Due to the different conditions, the charging time could be slightly longer.

**Note: Green = power on,**

**Red = charging,**

**Battery pack inserted + green = charging completed**

The battery pack can then be removed for use in your tool. The charger timer circuit and battery pack temperature safety cut-out devices prevent overcharge of your battery pack.

 **WARNING!** When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the battery to cool down before re-charging to achieve the full charge.

#### 4. FITTING AND REMOVING OF THE BATTERY

##### Fitting of the battery (Fig C.1)

- Align the battery as shown in fig C.1 and simply push the battery into the housing until it fully locks into position.
- Check that the battery is fully secured!

##### Removing the battery (Fig C.2)

Depress both of the battery release buttons simultaneously while at the same time pulling the battery out of the tool.


#### 5. STARTING/STOPPING (Fig D)

##### Starting

Move the On/Off switch (2) to the "I" On position.

##### Stopping

Move the On/Off switch (2) to the "O" Off position.

 **WARNING!** The tool runs for a few seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.

#### 6. USING THE BLOWER (Fig E)

The blower is intended for residential use only. Use the blower outdoors to move debris from hard surfaces. This blower is not designed to clear leaves from large grassy areas, or move

wet, heavy debris.


##### User tips

- Hold the blow tube approx 7" above the ground when operating the tool. Use a sweeping motion from side to side. Advance slowly keeping the accumulated debris/leaves in front of you.
- After blowing the debris/leaves into a pile, it is easy to dispose of the pile.

##### Caution!

- Do not blow hard objects such as nails, bolts, or rocks.
- Do not operate the blower near bystanders or pets.
- Use extra care when cleaning debris from stairs or other tight areas.
- Wear safety goggles or other suitable eye protection, long pants, and shoes.


#### STORAGE

 **WARNING: Store the blower indoors, in a cool dry location, out of reach of children and animals.**

##### a) ATTACHING THE WALL MOUNT BRACKET

Attach the wall-mount bracket to the wall with the four screws provided.

Tighten all four screws securely. Carefully check the bracket after mounting to make sure that no movement can occur during use. (see F1 ).

 **WARNING!** Always make sure your wall-mount bracket is securely mounted to the wall. Failure to do so could result in an accident, resulting in possible serious personal injury.

##### b) STORING YOUR BLOWER

The blower can be stored into the wall mount bracket as illustrated (See F2).

#### CLEANING THE TOOL

Clean the tool regularly.

**WARNING!** Keep your product dry. Under no circumstances spray with water.

- To clean the tool, use only mild soap and a damp cloth.



**WARNING!** Do not use any type of detergent, cleaner or solvent which may contain chemicals that could seriously damage the plastic.

- Self lubricating bearings are used in your product, therefore lubrication is not required.

## **WARRANTY STATEMENT**

### 30 DAY Satisfaction Guarantee

If for any reason you are dissatisfied with any WORX product, you can return the product, along with proof of purchase, within 30 days for a full refund.

If your WORX product becomes defective due to faulty materials or workmanship within the specified warranty period of;

- 24 months for DIY and light trade use, from the date of purchase.

We guarantee to repair or replace all defective parts free of charge, repair products subject to fair wear and tear, free of charge, or at our discretion, replace the unit free of charge to ensure minimum inconvenience to the customer. Your warranty is subject to the following conditions:

- Proof of purchase date and a valid receipt is produced.
- The product has not been misused.
- The product has not been used for Professional purposes.
- Unauthorized persons have not attempted repairs.
- The product has not been used for hire purposes.
- The product has not sustained damage through foreign objects, substances or accidents.
- Damage is not a result of fitting non-approved accessories.

To claim the guarantee, you will need to submit proof of purchase to the seller or an authorized repair agent.

You can check the location of your nearest authorized repair agent by contacting us at:

Positec USA, Inc.

Charlotte, NC 28216

PHONE: 1-866-354-WORX (9679)

This warranty does not apply to accessories. This warranty applies only to the original purchaser and may not be transferred. All repairs and replacement tools will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase. All repairs must use genuine spare parts.

**WORX**  
it's your nature

**Designed in Italy. Made in China**  
**Conçu en Italie. Fabriqué en Chine**  
**Diseñado en Italia. Fabricado en China**